


Sloping Hood & Angled Side Panel Options For Premier Open Access Lockers - 40000 Series Installation Instructions

Thank you for selecting the 40051 or 40052 sloping hood and/or the 40034 or 40044 angled side panel for the 40000 Series Premier Open Access Wood Lockers. These instructions will assist you in positioning and fastening the sloping hood and angled side panel to the locker.


Sloping Hood Installation Instructions

1. Place the sloping hood on top of the locker.
 - Ensure the **front edge** of the hood is flush with the **front of the locker body**.
 - The **side edges** should align flush with the **sides of the locker**.
2. From inside the locker compartment, **pre-drill two pilot holes** into the bottom of the sloping hood using a 1/8" drill bit.
 - Holes should be located 13 inches from the front face of the locker.
3. Insert **two (2) 1-1/4" self-tapping wood screws** (provided) through the ceiling of the locker compartment and into the sloping hood to secure it in place.

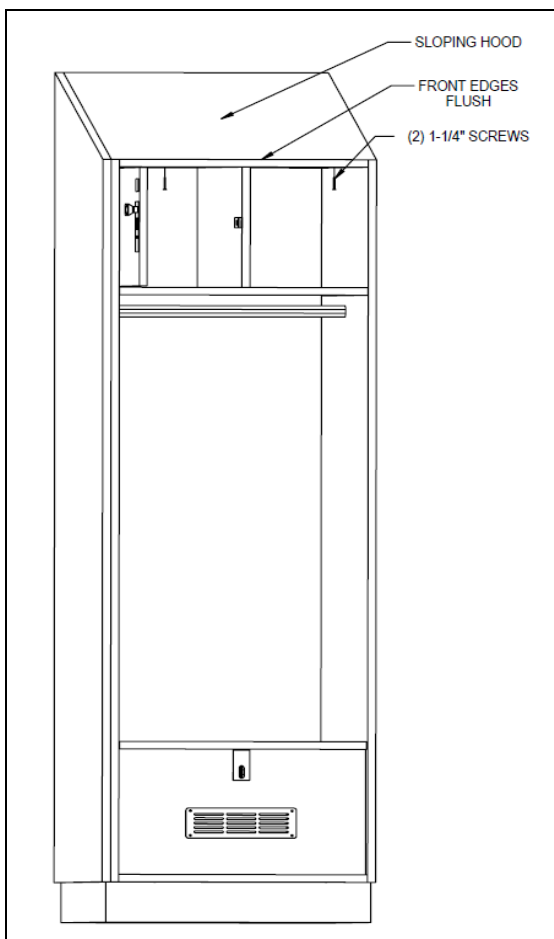

Angled Side Panel Installation Instructions

1. Position the angled side panel so it is **flush with the front edge** of the locker body.
2. From inside the locker, **install two (2) 1-1/4" self-tapping wood screws** (provided) through the pre-drilled holes to fasten the side panel to the locker.

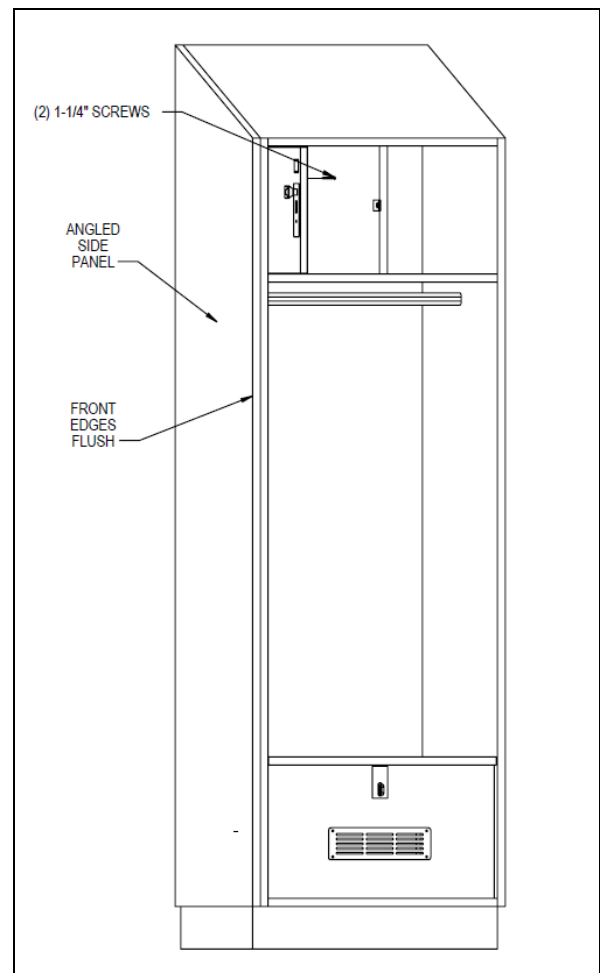

SALSBURY INDUSTRIES


18300 Central Avenue, Carson, CA 90746-4008
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com

Sloping Hood & Angled Side Panel Options For Premier Gear Lockers - 40000 Series Installation Instructions

Thank you for selecting the 40051 or 40052 sloping hood and/or the 40034 or 40044 angled side panel for the 40000 Series Premier Gear Wood Lockers. These instructions will assist you in positioning and fastening the sloping hood and angled side panel to the locker.


Sloping Hood Installation Instructions

1. Place the sloping hood on top of the locker.
 - Ensure the **front edge** of the hood is flush with the **front of the locker body**.
 - The **side edges** should align flush with the **sides of the locker**.
2. From inside the locker compartment, **pre-drill two pilot holes** into the bottom of the sloping hood using a 1/8" drill bit.
 - Holes should be located 13 inches from the front face of the locker.
3. Insert **two (2) 1-1/4" self-tapping wood screws** (provided) through the ceiling of the locker compartment and into the sloping hood to secure it in place.

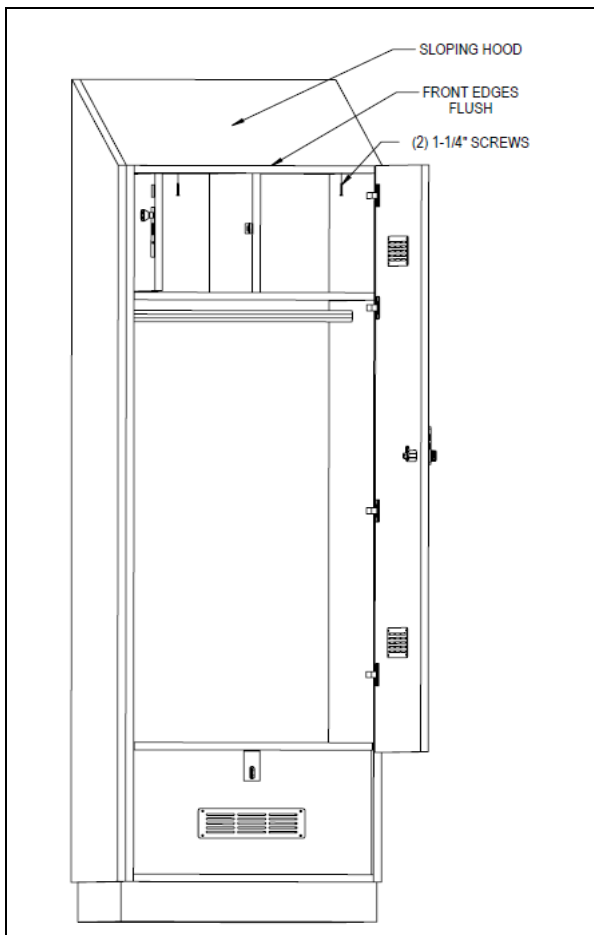

Angled Side Panel Installation Instructions

1. Position the angled side panel so it is **flush with the front edge** of the locker body.
2. From inside the locker, **install two (2) 1-1/4" self-tapping wood screws** (provided) through the pre-drilled holes to fasten the side panel to the locker.

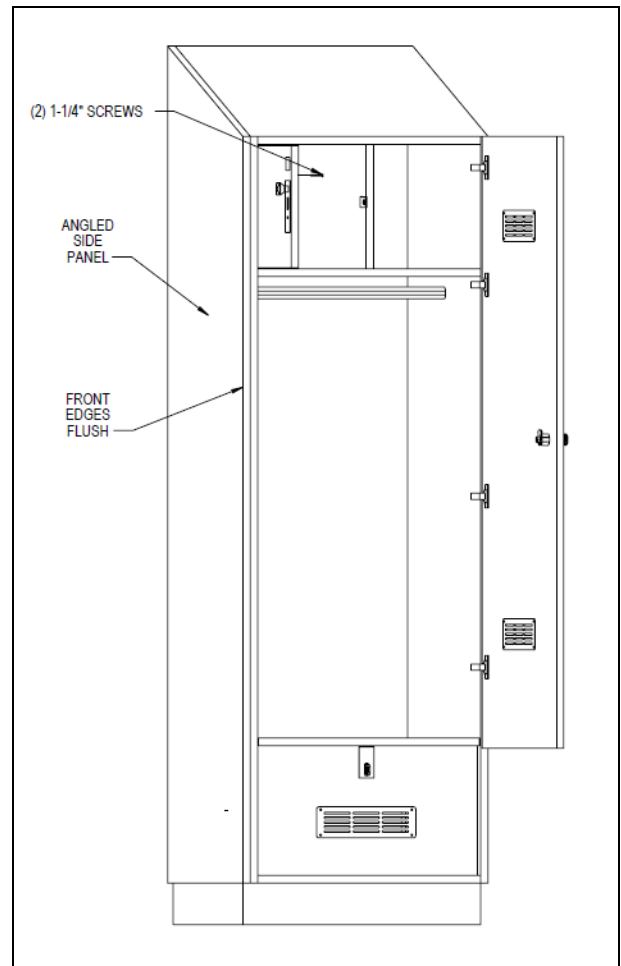

SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com