


Aluminum Locker Benches – Free Standing Assembly & Installation Instructions

Thank you for selecting Salsbury aluminum locker benches. We are confident that the quality and construction of this product will provide years of maintenance free use.

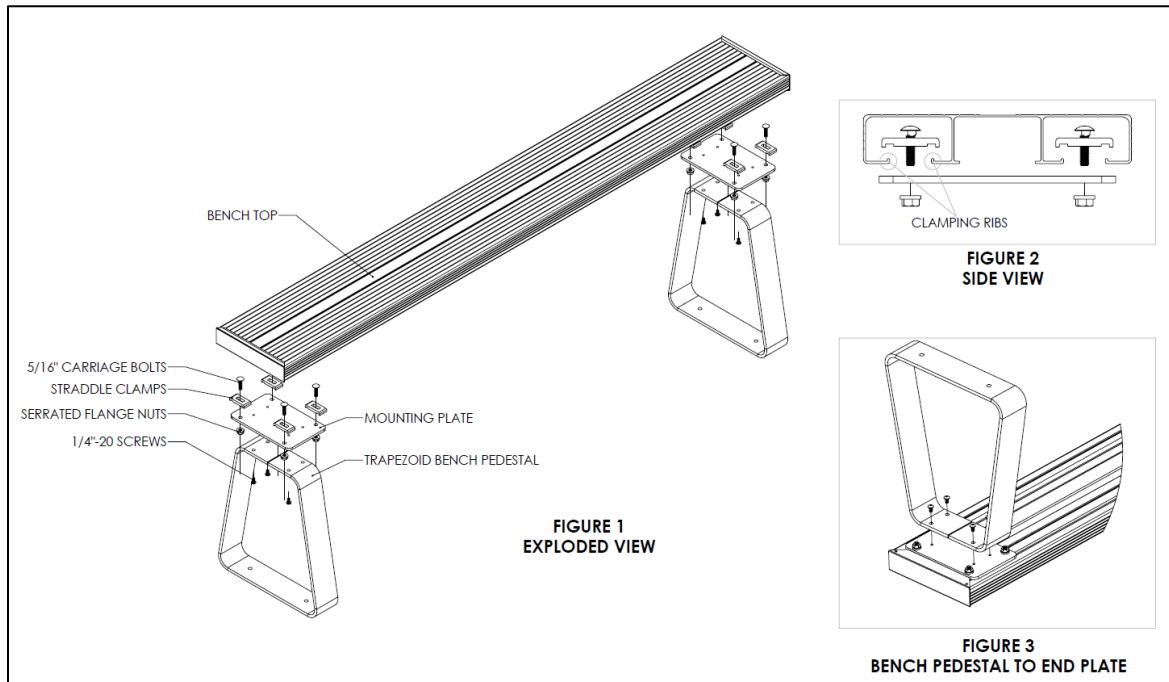

Preliminary Notes

Basic steps for assembly and installation:

1. Place the bench top on a level surface.
2. Attach the bench pedestals to the bench top.

The bench is designed to be free-standing and does not require floor anchoring for typical use. However, improper assembly or placement on an uneven surface may result in tipping, which could cause injury to anyone sitting on the bench.

The hardware provided is intended to fasten the bench pedestals to the bench top. For 3', 4', 5', and 6' bench tops, two (2) mounting plates and two (2) pedestals are included. For 7' and 8' bench tops, three (3) mounting plates and three (3) pedestals are provided.

Each mounting plate requires four (4) 5/16" x 1-1/4" carriage bolts, four (4) straddle clamps, four (4) 5/16" serrated flange nuts, and four (4) 1/4"-20 x 1/2" screws—resulting in a total of eight (8) of each hardware item for two plates, or twelve (12) of each for three plates.

When installing, the center of each bench pedestal should be positioned 4" from each end of the bench top. If a third pedestal is included, it should be centered between the two end pedestals.

Assembly

1. Place the bench top upside down on a flat, stable surface.
2. Position a mounting plate at one end of the bench top. Insert four (4) 5/16" carriage bolts through the straddle clamps and loosely attach them to the outer holes of the mounting plate using four (4) 5/16" serrated flange nuts, as shown in Figures 1 and 2. Repeat for the second (and third, if applicable) mounting plate(s).
3. Rotate each straddle clamp 90 degrees so it grips the clamping ribs inside the bench top when the nuts are tightened. Ensure the clamps are properly aligned with the ribs, and the carriage bolts are seated inside the clamp slots (see Figure 2).
4. Slide each mounting plate into position so that it is centered under the bench top and located 4" from the end. Once positioned correctly, securely tighten all nuts.
5. With the mounting plates installed, use the 1/4"-20 x 1/2" screws to attach the bench pedestals, as shown in Figure 3.

Complete the installation by testing the bench for stability.

SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com

Installation instructions are provided as general guidelines. It is advised that a professional installer be consulted. Salsbury Industries assumes no product assembly or installation liability.
Copyright © 2025 Salsbury Industries. All rights reserved. (04/24/2025)