

# Premier Open Access Lockers – 40000 Series

## Installation Instructions

Thank you for choosing the 40000 Series Premier Open Access Wood Lockers. We're confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you through a wall-anchored or back-to-back locker installation. Individual job conditions will dictate the fastener types and anchoring methods to wall, floor, or both.

### Assembly Overview

The 40000 Series Wood Lockers are shipped factory-assembled with minimal on-site assembly required. You may need to:

- Connect lockers side-by-side
- Attach optional side panels to exposed sides
- Anchor lockers to a wall or to each other

### Included Hardware

1. (1) Metal wall strap (3-hole): For attaching the locker to a wall or another locker. Bend as needed.
2. (4) #8 x 5/8" pan-head sheet metal screws: For securing the metal strap to the top of the lockers.
3. (2) 1-1/4" barrel nuts with screws: For fastening lockers together side-by-side.
4. (2) 1-1/4" wood screws: For attaching optional side panels.
5. (1) Adhesive-backed number plate.

### Installation Instructions

1. **Remove Shipping Supports**  
Wooden slats attached to the locker base during shipping should be removed. Tap them gently with a mallet and extract any remaining nails.
2. **Position and Level Lockers**  
Place lockers in position and level them. The rear edge of the base should rest against the wall or another base (for back-to-back installs). Allow for:
  - 5/8" air space between the locker and wall
  - 1-1/4" air space between lockers that are installed back-to-back
3. **Prepare Metal Straps**
  - Wall installation: Bend the strap as shown in the illustration.
  - Back-to-back installation: Leave the strap flat.*(Note: Straps will be installed in Step 5.)*
4. **Connect Lockers Side-by-Side**  
Use the provided barrel nuts and screws to bolt lockers together through the two pre-drilled holes near the front edge of the locker sides. These holes also accommodate the optional side panels.

### 5. Attach Optional Side Panels

Align panels flush with the locker front. The panel width will cover the 5/8" rear air space.


### 6. Install Metal Straps

Once lockers are plumb and level, attach the bent or flat metal straps to the top of the lockers and then to the wall or adjoining lockers.

### 7. Install Number Plate

Peel the backing, align the plate with the recess, and press firmly into place.

### Installation Illustration

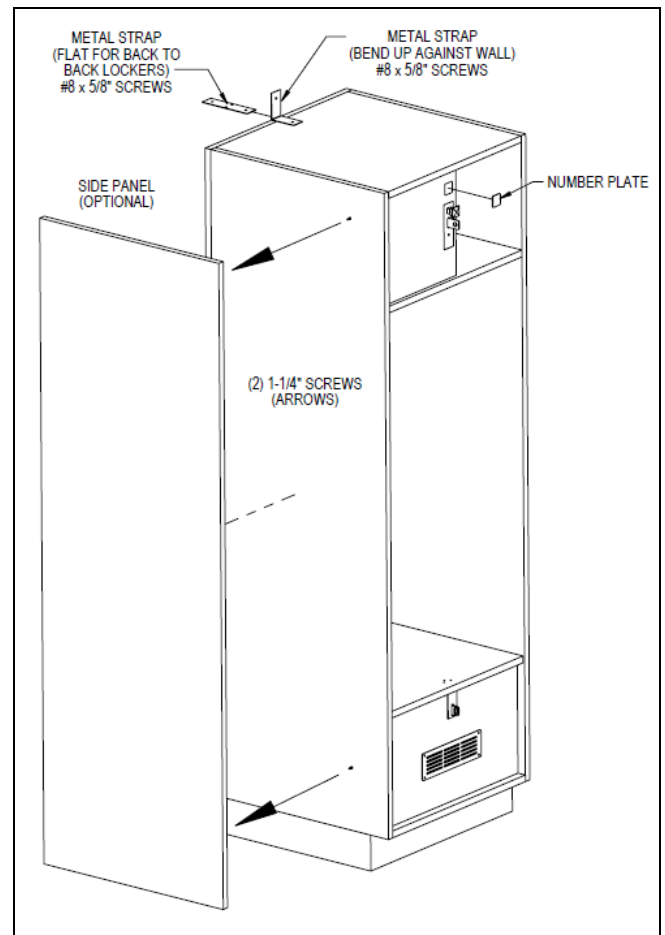

### SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008  
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700  
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800  
www.lockers.com engineering@lockers.com