

Premier Gear Lockers – 40000 Series

Installation Instructions

Thank you for choosing the 40000 Series Premier Gear Wood Lockers. We're confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you through a wall-anchored or back-to-back locker installation. Individual job conditions will dictate the fastener types and anchoring methods to wall, floor, or both.

Assembly Overview

The 40000 Series Wood Lockers are shipped factory-assembled with minimal on-site assembly required. You may need to:

- Connect lockers side-by-side
- Attach optional side panels to exposed sides
- Anchor lockers to a wall or to each other

Included Hardware

1. (1) Metal wall strap (3-hole): For attaching the locker to a wall or another locker. Bend as needed.
2. (4) #8 x 5/8" pan-head sheet metal screws: For securing the metal strap to the top of the lockers.
3. (2) 1-1/4" barrel nuts with screws: For fastening lockers together side-by-side.
4. (2) 1-1/4" wood screws: For attaching optional side panels.
5. (2) Adhesive-backed number plate.

Installation Instructions

1. **Remove Shipping Supports**
Wooden slats attached to the locker base during shipping should be removed. Tap them gently with a mallet and extract any remaining nails.
2. **Position and Level Lockers**
Place lockers in position and level them. The rear edge of the base should rest against the wall or another base (for back-to-back installs). Allow for:
 - 5/8" air space between the locker and wall
 - 1-1/4" air space between lockers that are installed back-to-back
3. **Prepare Metal Straps**
 - Wall installation: Bend the strap as shown in the illustration.
 - Back-to-back installation: Leave the strap flat.*(Note: Straps will be installed in Step 5.)*
4. **Connect Lockers Side-by-Side**
Use the provided barrel nuts and screws to bolt lockers together through the two pre-drilled holes near the front edge of the locker sides. These holes also accommodate the optional side panels.

5. Attach Optional Side Panels

Align panels flush with the locker front. The panel width will cover the 5/8" rear air space.


6. Install Metal Straps

Once lockers are plumb and level, attach the bent or flat metal straps to the top of the lockers and then to the wall or adjoining lockers.

7. Install Number Plate

Peel the backing, align the plate with the recess, and press firmly into place.

Installation Illustration

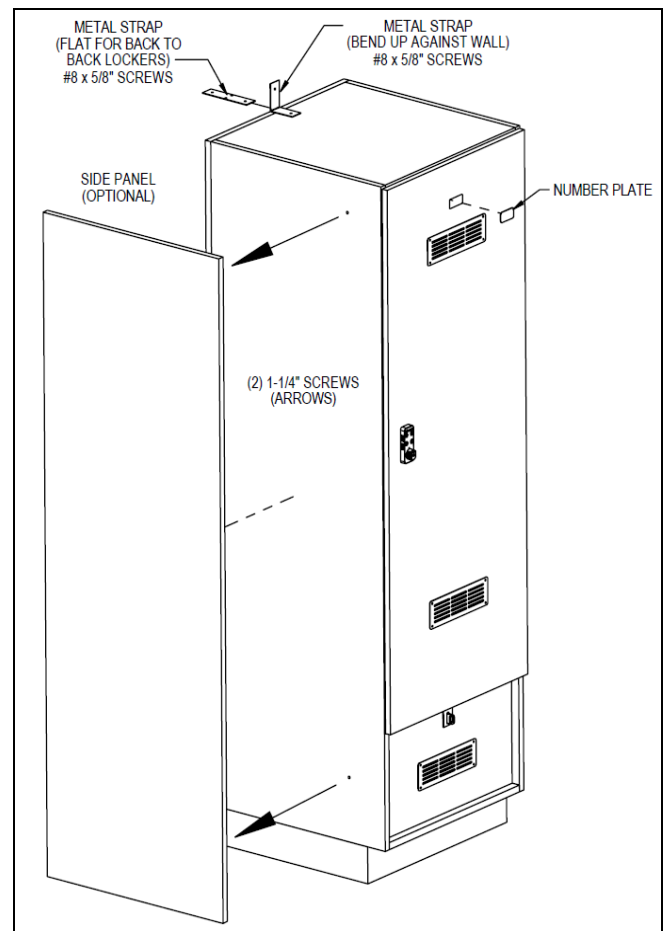

SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com