


24" Wide Open Access Lockers – 70000 Series

Installation Instructions

Thank you for selecting Salsbury's standard open access lockers. We are confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you in the assembly and installation of a standard open access locker with locked compartment and locked foot locker. Installation hardware is provided. Individual job conditions will dictate the type of installation fasteners and whether the lockers must be anchored to the wall, the floor, or both.

Assembly

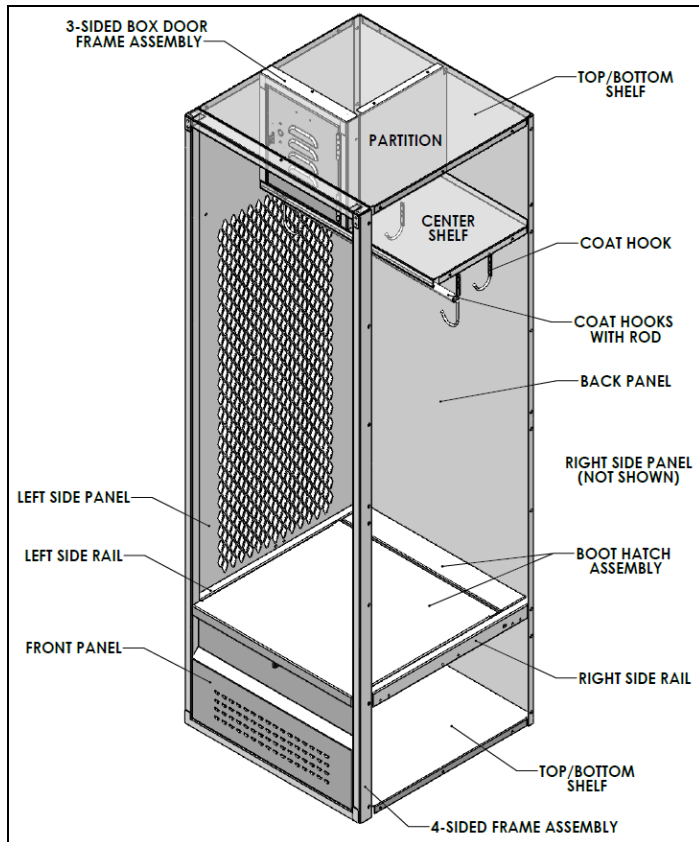

Notes

Fasteners are provided to assemble the standard gear locker, but fasteners are not provided to anchor the locker to the wall, floor, or another locker. These will vary according to the anchoring conditions.

All bolted connections should be tight initially. Square locker frame before tightening all connections.

Adjust box door to operate freely from open to close, if required. Make certain locks operate properly before closing doors.

Instructions

1. Place the back panel on a flat surface, then attach the left-side panel to the back panel. Ensure the flange of the side panel (at a 90-degree angle) is facing outward toward the back panel. The bolt heads should be on the outside, with the nuts positioned on the inside.
2. Attach the top shelf to the back panel and left-side panel. The flanges of the top shelf should be placed on the inside of both the back and left-side panels, with the rectangular notches facing the front. The bolt heads should be on the outside, with the nuts positioned on the inside.
3. Attach the 3-sided box door frame assembly to the top shelf and left-side panel. The bolt heads should be on the outside, with the nuts positioned on the inside.
4. Attach the partition to the top shelf and right edge of 3-sided box door frame.
5. Attach center shelf underneath the 3-sided box door frame to the left-side panel and partition.
6. Attach right side panel to the back panel, top shelf and center shelf. Ensure the flange of the right-side panel (at a 90-degree angle) is facing outward toward the back panel.
7. Attach the bottom shelf to the back panel, left-side panel, and right-side panel. Rectangular notches go to the front.
8. Attach universal side rails to the left-side and right-side panels. Attach the boot hatch assembly to the left and right side rails.
9. Attach coat hooks and coat rod. The bolt heads should be on the outside, with the nuts positioned on the inside.
10. Attach front panel to 4-sided frame assembly. The bolt heads should be on the outside, with the nuts positioned on the inside.
11. Assemble the 4-sided frame assembly with front panel to the assembled locker body. The bolt heads should be on the outside, with the nuts positioned on the inside.

This completes the assembly of the standard open access locker.

SALSBUURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com