

Security Cage Storage Lockers – 8400 & 8500 Series Installation Instructions

Thank you for selecting Salsbury's 8400 (standard size) or 8500 (large size) security cage storage lockers. We are confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you in assembling the lockers. The lockers should then be installed and anchored to the floor, wall, or to both. Individual job conditions will dictate the type of anchor fasteners.

STANDARD SIZE (5 compartments)

#8400 - 18"W x 72"H x 18"D, 140 lbs.



LARGE SIZE (4 compartments)

#8500 - 30"W x 80"H x 30"D, 230 lbs.



Preliminary Note

Please read the complete assembly instructions before attempting to assemble the lockers. Check the materials to be sure that they are correct for the job and that there is no damage.

Use ¼" – 20 X ¾" long screws all around with screw heads on the outside. Lockers should be assembled individually as indicated in the order of the drawings.

The essential tools required for assembling the lockers are a phillips head screw driver and a pair of pliers. The lockers should be assembled on a flat level surface and installed in position, anchoring to the floor or wall, as required.

Assembly Overview

Fasten the compartment shelves to the pair of sides (right/left) using shelf supports that bolt to the shelf on the outside of the wire mesh with three screws, large washers, and nuts that go through the wire mesh. Place the back against the two sides and screw through the back and the upright posts on the inside of the cage locker.

Bolt the top on. The bottom is identical and should have the flanges down. Place and secure the door to the hinges and bolt in place. Level the cage lockers and mount to the floor, or wall, as required.

SALSBURY INDUSTRIES

1010 East 62nd Street, Los Angeles, CA 90001-1598
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com

Security Cage Storage Lockers – 8400 & 8500 Series Installation Instructions

FOR BOTH #8400 & #8500:



NOTE:

Only 3 compartments are shown in the illustrations for clarity.

Install shelves to left/right sides with ¼"-20 x ¾" long screws, large diameter washers, and ¼"-20 nuts.

Place the back against the rear of unit and bolt to the side frames with the same hardware as above.

Place the door within the door frame in the proper position. Align the hinges and secure with the same hardware as above.

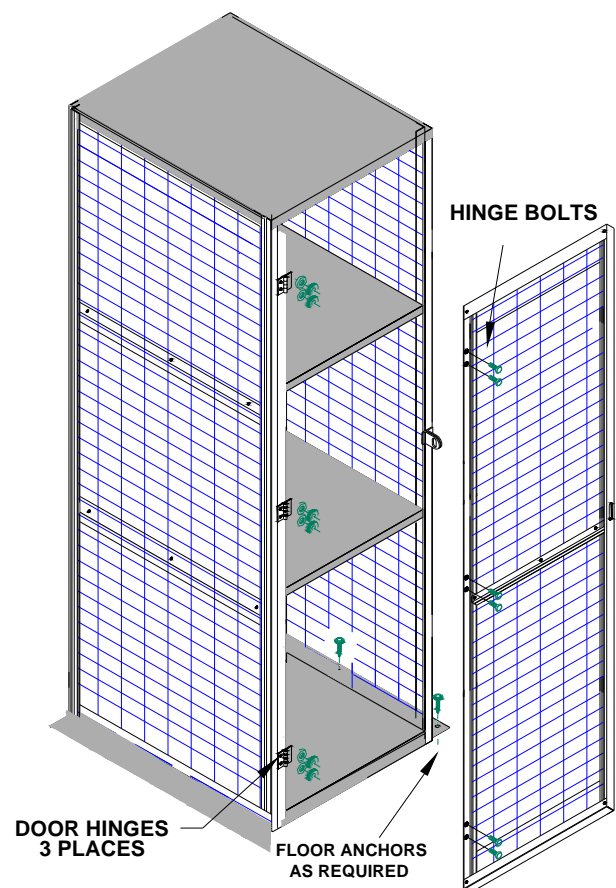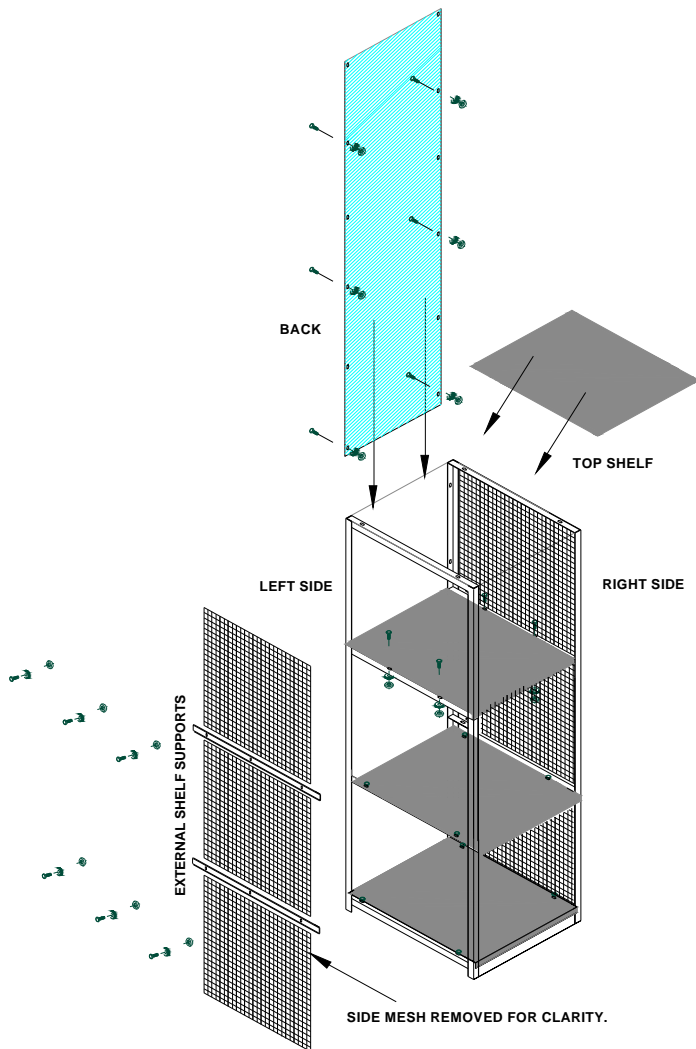

SALSBURY INDUSTRIES

1010 East 62nd Street, Los Angeles, CA 90001-1598
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800
www.lockers.com engineering@lockers.com